

WARNINGS

1

To avoid spills and overflow, keep the machine vertical after installation. Machine efficiency can be affected if the circuit board is contaminated.

2

Do NOT modify, disassemble, or repair the machine arbitrarily. If any failure occurs, please contact the relevant machine technician in time.

3

Do NOT use a quick-charger to charge the machine.

4

Do NOT use or store the machine above 70°C.



SCAN FOR ALL RESOURCES
OR VISIT [THEMAGICSCENT.COM/RESOURCES](https://themagicscent.com/resources)

THE MAGIC SCENT™


AROMA SYSTEM

TMS F1

**CAR & ROOM
SCENT DIFFUSER**

[THEMAGICSCENT.COM](https://themagicscent.com)

WHAT'S IN THE BOX

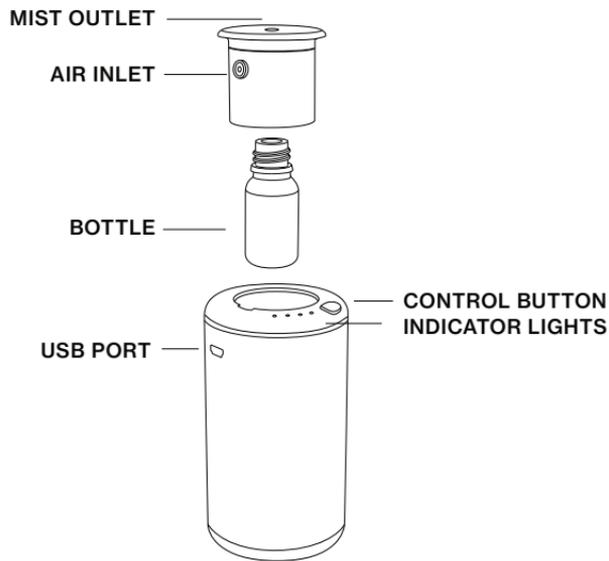

MACHINE



BOTTLE



MICRO USB



MANUAL

REPLACING THE FRAGRANCE BOTTLE




1

Remove the top from the base.



2

Unscrew the fragrance bottle and replace.

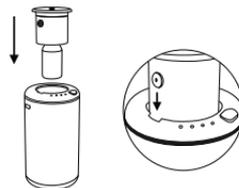

3

Re-insert the top with air inlet towards the gap.

STATUS LIGHTS

CHARGING

- ○ ○ ○ STATIC
- ○ ○ ○ FLASHING
- ○ ○ ○ OFF

Out of Power
Charging*
Done Charging

INTENSITY

- ● ○ ○
- ● ○ ○
- ● ● ○
- ● ● ●

GRADE 1
GRADE 2
GRADE 3
GRADE 4

INTENSITY

GRADE	WORKING (SECONDS)	STOP (SECONDS)
G1	6	360
G1	6	180
G1	10	280
G1	10	140

*It takes about 1 hour to recharge the battery fully; one full recharge can last about 2-3 hours.